



INSTALLATION INSTRUCTIONS MANUAL

MOUNTING LOCATION

Carefully select a suitable mounting location for the tweeters. Be sure to check behind the mounting location for adequate space for tweeter depth.


INSTALLATION

Screw the angle mounting to the location selected or use the double sided tape provided to stick the flush mounting to the location selected.

WIRING


Feed the wires from the tweeter through the flush/angle mounting opening and connect these wires to the line wires coming from the included outboard crossover tweeter terminals. Push the tweeter into the flush/angle mounting until the tweeter sits nicely into the mounting.

INSTALLATION PROCEDURE :

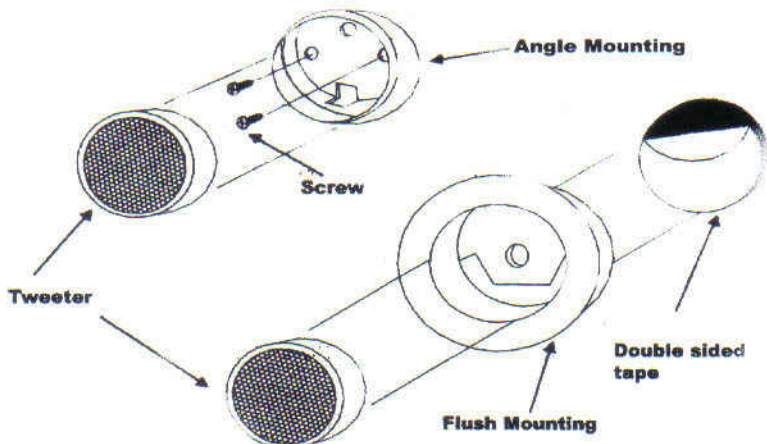



WIRING DIAGRAM :

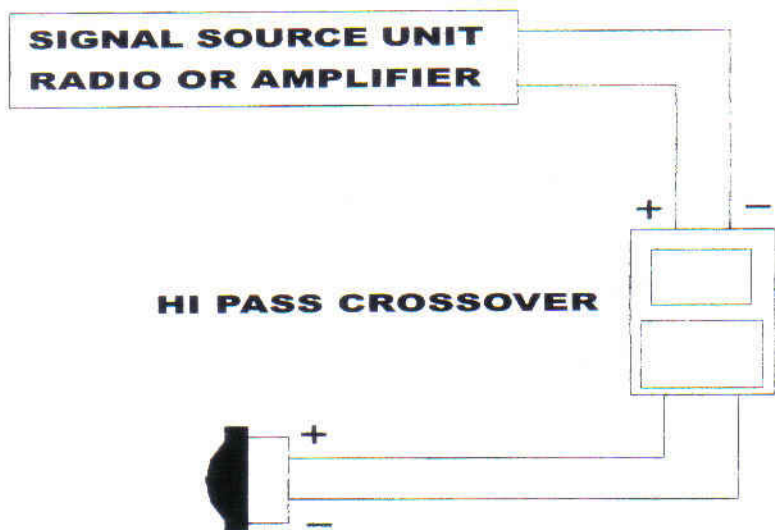

SPECIFICATIONS :

MODEL : IF-T10

25mm Titanium Tweeter System with High Pass Crossover Network

Peak Power Handling : 200 Watts

Continuous Power Handling(RMS) : 100 Watts

Impedance : 4 Ohm

Magnet Type : Neodymium

Sensitivity : 92dB at 1M/1W

Freq. Response : 2 kHz - 22 kHz

Voice Coil Dia. : 25 mm